

Instruction Manual

DENSO CORPORATION

Preface

Thank you for purchasing this product.

Before using this product, read this document carefully so that you can use this product correctly and safely.

For safe usage

This document uses symbols for warnings, cautions, and prohibitions. These symbols and their meanings are as follows. Please make sure you fully understand the meanings of these symbols before reading the rest of this document.

⚠ WARNING	Indicates an item for which incorrect handling can result in a major accident involving death or serious injury.	
A CAUTION	Indicates an item for which incorrect handling can lead to injury or damage to property. Under certain conditions, more serious consequences may result.	
○ PROHIBITIED	Indicates a prohibited method of handling.	
MANDATORY	Indicates a mandatory method of handling and a forcible item.	

WARNING and CAUTION for handling this product

WARNING

Do not perform any work while the vehicle is running.
 Doing so could result in an accident.



- Always observe the following rules. Failure to do so can result in heat generation, fire, blowout, or electrical shock.
 - Do not disassemble or alter this product.



- Do not connect this product to anything with a voltage exceeding the ratings of this product.



- Do not connect the probe to any parts applied by a voltage exceeding the ratings of this product.



CAUTION

<Work environment>

Do not work anywhere that water could come in contact with the equipment.



• Block the wheels of the vehicle with chocks before carrying out work. Failure to do so could result in an accident.



⚠ CAUTION

 When working anywhere hardly visible, for example under the vehicle, always make the vehicle ignition or key switch OFF to ensure that the vehicle cannot be moved.



Failure to do so could result in an accident.

• When working near the engine compartment, be careful of the engine and other high-temperature parts.



High-temperature parts can cause burns.

• Do not route the cable of this product over the engine compartment, especially if the engine is running.



Failure to follow this instruction could result in an accident by catching up the cable and clothes with the belt and pulley.



Do not use this product in an extremely dusty environment.



• The response of the LCD may be slow. (Caution for the models with LCD) This phenomenon is attributed to the characteristics of the LCD and not a failure.



<Checking before use>

• Inspect for adhesion of foreign materials to or pin breakage of each connector of this product before use.



 Before connecting the datalink cable to this product and the vehicle side diagnosis connector. inspect to see if each connector is contaminated with foreign materials or the connector pins are damaged.



 Before using the SD memory card, inspect to see if any foreign materials are stuck in the SD memory card slot or the contact surface of the SD memory card is contaminated with foreign materials.



<Handling of the product and equipment>

• Do not drop this tool or subject it to a strong impact.



 When connecting the datalink cable to this product and the vehicle side diagnosis connector or disconnecting it from them, ensure correct orientation of the connector and gently put it straight in.



If the connector is connected in the wrong orientation, or put in or pulled out at the wrong angle, there is a risk of damaging the connector terminal and this may cause malfunctioning of the vehicle and/or this product.



When connecting the USB cable to this product and a PC or disconnecting it from them, ensure correct orientation of the connector and gently put it straight in.



If the connector is connected in the wrong orientation, or put in or pulled out at the wrong angle, there is a risk of damaging the connector terminal and this may cause malfunctioning of the PC and/or this product.



When pulling out the connector of datalink cable or USB cable, hold the connector section not the cord.



Pulling on the cord section can break the lines in the cable.

• Do not lift or drag this product by holding the cable connected to this product. When moving or installing, move this product by holding with hands.



A CAUTION

	Z: SASTION	
•	Do not apply the load causing stress to the connector connected to this product. Applying too much force could result in breaking the connector terminal and this may cause malfunctioning of the vehicle, the PC and/or this product.	\bigcirc
•	Do not insert anything other than an SD memory card in the SD memory card slot on this product.	\bigcirc
•	Do not turn the power of this product OFF or remove the SD memory card while the SD memory card indicator is flashing.	
	Failure to do so results in failure of the SD memory card or loss of the data in it.	
•	Do not pull out an SD memory card when power is on.	\bigcirc
<	Usage restrictions>	
•	Do not use a datalink cable other than the dedicated datalink cable supplied with this product.	\bigcirc
•	When you start this product only by USB power (BUS power), be careful not to set the PC to, "low power consumption mode" / "suspend mode".	0
•	The USB port to be connected to this product requires a power supply capability of 500 mA current source.	
•	As for connecting this product to the PC, directly connect it to the USB port on the PC or via a USB hub that has the capability of supplying sufficient current.	0
	Some types of USB hubs may have insufficient power supply capability for normal operation. (For example, a hub on PC keyboard is not suitable for this connection.)	
<;	Storage and maintenance of the product>	
•	Do not expose this product to direct sunlight for long periods of time.	
•	The backlight of the LCD may be deteriorated and its luminance could be reduced consequently	

in a high humid environment. (Caution for the models with LCD)

Use and store this product in a dry environment. Humidity may reduce the luminance of the LCD backlight.

Do not use solvents or thinners such as benzine when cleaning.

To do so could cause deformation, discoloration, cracking, etc., and also result in loss of functions. To clean, wipe gently with a soft damp cloth with diluted neutral detergent.



<Disposal of the product>

• When discarding the product or its accessories, contact authorized industrial waste-disposal service.



Those who discard waste without authorization will be punished by law.

Disposal Requirements

The product shall be disposed in accordance with all applicable legislation for disposal of Electrical and Electronic Equipment in each country and region. (e.g. WEEE Directive in EU)

Please contact our authorized distributor or our sales agent when disposing it.

WARNING and CAUTION for Bluetooth (models with Bluetooth)

WARNING

• Do not use this product near medical devices or inside medical facilities as it may affect electronic devices with medical applications.



• Make sure to keep this product at least 22 cm away from persons wearing a pacemaker. Radio wave could affect the performance of pacemaker.



• Do not use this product near an automatic control device such as an automatic door or a fire alarm.



Radio wave could effect its operation and result in an accident caused by malfunction.

• Do not use this product in electric trains, airplanes, or places where flammable gasses are present, such as gas stations.



Failure to do so may result in accidents.

A CAUTION

- The communication range depends on any obstacles (i.e., human bodies, metal, walls) between this product and the Bluetooth device, and the condition of the radio wave.
 - Reference: Page vi Bluetooth characteristics (models with Bluetooth)
- An antenna is built into this product. The sensitivity of the Bluetooth communication is maximized
 when no obstacles exist between the connected Bluetooth device and the antenna of this product.
 The communication distance becomes shorter should there be obstacles between the antenna of
 the connected Bluetooth device and the built-in antenna of this product.
- The following circumstances could affect the sensitivity of the Bluetooth communication.
 - Obstacles such as human body, metal, wall, etc.
 - In close proximity to established wireless networks, microwave ovens, and other devices that emit radio waves.
- Since Bluetooth devices and the wireless LAN (IEEE802.11 b/g) use the same frequency band (2.4 GHz), radio wave interference could occur and cause degradation of communication speed, noise and disconnection if a Bluetooth device is used near a wireless LAN equipped device.
 To resolve poor communications, perform the following steps.
 - Place this product as close to a Bluetooth device as possible.
 - Keep a wireless LAN equipped device away from this product as much as possible.
 - If communications do not improve, turn off any wireless LAN equipped devices nearby.
- Use the USB cable for more data critical situation over the Bluetooth communication (wireless) due to the greater possibility of loss of connection during data upload or download of the data transmission.
- Please note that we shall have no liability for any information leakage from the Bluetooth communication.

The countries where you can use the models with Bluetooth


Japan, USA, Canada, Australia, New Zealand, EU (Europian Union)

* In the countries other than those above, you cannot use the models with Bluetooth.

Bluetooth characteristics (models with Bluetooth)

The communication range depends on any obstacles (i.e., human bodies, metal, walls) between this product and the Bluetooth device, and the condition of the radio wave.

<Reference> PC and Bluetooth Serviceable Area of BUS/COACH

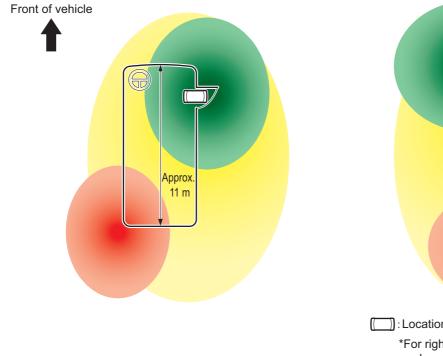

:Location of this product

*For right-hand steering wheel, the location and area of this product are opposite.

Approx 11 m

<Sampling of five signals on Hino Diagnostic eXplorer (HinoDX)>

Serviceable area: Stable communication speed

Serviceable area: Communication speed instability

Unserviceable area

T01867E

ACAUTION

This area is for reference only. Not all of the products are supported.
 Thus, in some cases, this product is not able to communicate depending on peripheral environment.

Trademarks

- Microsoft, Windows[®], Windows 7, Windows Vista, Windows XP are the trademarks or registered trademarks of the Microsoft Corporation of the United States in the United States and other countries.
- Bluetooth[®] is the trademark or registered trademark of Bluetooth SIG, Inc. in the United State and other countries.
- SD Memory CardTM and SDHC Memory CardTM are the registered trademarks of Panasonic Corporation, SunDisk Corporation in the United State and Toshiba Corporation.
- Names of products and companies in this document are registered trademarks or trademarks of their owners.
- TRON, iTRON and µiTRON are not the names for specific products and series of products.
- TRON is an abbreviation of "The Real-time Operating System Nuceus".
- μiTRON is an abbreviation of "Micro Industrial TRON".

Table of contents

1 Before Use

	1-1 Product Configuration	1
	Components	1
	1-2 Names of the Parts	2
	1-3 Setup	3
	Required operating environment of the PC	
	Necessary Setup	
	Installing DST-i setup software to a PC (all models)	
	Installing DST-i software for HINO Vehicles (all models)	
	1-4 Connection Connecting to the vehicle	
	Connecting to the verticle	
	1-5 Inserting an SD Memory Card	
	Inserting/removing an SD memory card	
2	Basic Operations	
	2-1 Starting	8
	2-2 Ending	10
3	Indicator	
	3-1 Indicator	11
_		
4	Product Specifications	
	4-1 Specifications of This Product	
5	Warranty	
	5-1 Warranty	

1 Before Use

1-1 Product Configuration

Check that you have all of the following standard components before using this product.

Components

Set Part Number: 95171-0102* (without LCD, without Bluetooth)

95171-0103* (with LCD, without Bluetooth) 95171-0104* (without LCD, with Bluetooth) 95171-0105* (with LCD, with Bluetooth)


No.	Part Name	Illustration	Part No.	Q'ty
1	Main unit	without LCD		1
		With LCD		
2	Datalink Cable	T01857Z	95171-1243*	1
3	USB Cable	T01871Z	95171-1011*	1
4	Instruction Manual (this document)		-	1

NOTE

• The last figure of a part No. is indicated with *. When you ask for information, make inquiries with the 9-digit part No. and part name.

1-2 Names of the Parts

The names of the product parts are as follows:

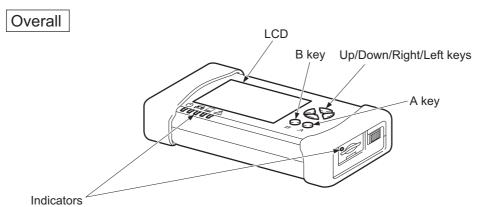



^{*} For detailed information about indicators, refer to "Chapter 3 Indicator/3-1 Indicator".

This overall illustration is for the models with LCD.

The models without LCD are not equipped with LCD, A key, B key and Up/Down/Right/Left keys.

Upper side

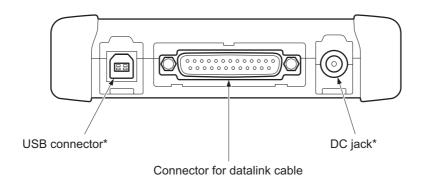

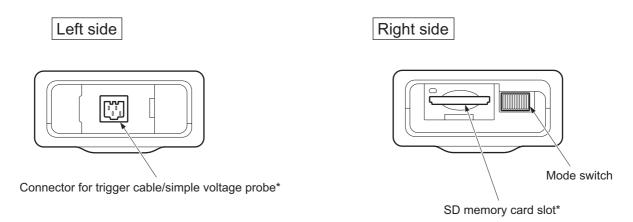

^{*} Rubber caps are provided for "USB connector", "DC jack", "SD memory card slot" and "Connector for trigger cable/simple voltage probe".

T02509E

1-3 Setup

You must carry out the setup necessary for use of this product.

Required operating environment of the PC

For using this product, a PC with following operating environments is required.

- OS: Microsoft Windows 2000 (SP4), XP, Vista, 7
- With USB 2.0 interface as standard
- Internet Explorer 5.5 or later version should be installed.
- Access to Internet is allowed. (Broadband internet connection is recommended)

NOTE

• If this product is used as the interface, the operating environment of the software (Hino DX) on a PC side is needed in addition to the above operating environment.

Necessary Setup

For using this product, following setup is needed.

• Installing DST-i setup software to a PC (all models)

A dedicated USB driver, the setup utility (DST-i configuration tool), etc. which is required for connecting this product and a PC using a USB cable or Bluetooth shall be installed to the PC.

Reference: Page 4 Installing DST-i setup software to a PC (all models) (Chapter 1 Before Use/Setup)

Installing DST-i software for HINO Vehicles (all models)

You must install the DST-i software for HINO Vehicles to this product.

For obtaining the DST-i software for HINO Vehicles, "The license certification of the DST-i software for HINO Vehicles" is required separately.

Reference: Page 4 Installing DST-i software for HINO Vehicles (all models) (Chapter 1 Before Use/Setup)

Installing Bluetooth driver software and Paring to a PC (models with Bluetooth)

For the models with Bluetooth, to connect this product with a PC through the Bluetooth communication function, you must install the Bluetooth driver software to the PC beforehand. In addition, you must execute pairing between the PC and this product.

ACAUTION

- Do not connect this product with a PC using the USB cable before the DST-i setup software installation to your PC is completed.
- To install the DST-i setup software to a PC, log on with administrator privileges and close all running applications before installation.
- In installing the DST-i software for HINO Vehicles, execute the install by using the USB cable in the state that this product and the PC are connected.
 Do not execute the install in using Bluetooth communication.
- Use of a Bluetooth driver software equipped as standard to the PC with Windows XP (SP2) or later version is recommended for use of a Bluetooth driver.
- This information does not guarantee the connection between all of commercially available Bluetooth modules and information terminals equipped with Bluetooth (e.g., PC and cellular phone).
- Use a Bluetooth module that is labeled with the Bluetooth logo mark and conforms to the Bluetooth standard 2.0.
- Total eight Bluetooth modules and information terminals having Bluetooth can execute paring with this product. If ninth Bluetooth module or information terminal executes paring, first Bluetooth module or information terminal will be cancelled.

Installing DST-i setup software to a PC (all models)

To connect this product with a PC using the USB cable or Bluetooth, installing the DST-i setup software to your PC is needed.

1. Access the following download site and install the DST-i setup software following the displayed instructions.

http://www.ds3.denso.co.jp/dst-i/hino/setup/

Installing DST-i software for HINO Vehicles (all models)

You must install the DST-i software for HINO Vehicles to this product. For obtaining the DST-i software for HINO Vehicles, "The license certification of the DST-i software for HINO Vehicles" is required separately.

- Access to the download site describing "The license certification of the DST-i software for HINO Vehicles" (sold it separately)
- **2.** Enter the access key described on "The license certification of the DST-i software for HINO Vehicles" and execute login.
- **3.** Download the installation manual of the DST-i software for HINO Vehicles and install the software according to the manual.

ACAUTION

 In installing the DST-i software for HINO Vehicles, execute the install by using the USB cable in the state that this product and the PC are connected.
 Do not execute the install in using Bluetooth communication.


1-4 Connection

Connecting to the vehicle

Use the datalink cable to connect this product with the vehicle.

Check the position of the diagnosis connector of the vehicle side in the repair manual of the vehicle.



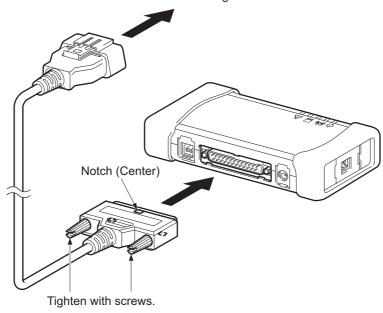


T01861E

NOTE

• The power supply of this product is turned ON by turning the mode switch ON after connected with the vehicle.

Connecting to a PC

 Use a USB cable to connect this product to a PC.



NOTE

- The power supply of this product is turned ON by turning the mode switch ON after connected with a PC.
- When the USB communication with the PC is established, the PC communication (USB) indicator on this product lights or flashes in green.
- When establishing the connection with the Bluetooth communication function on the models with Bluetooth, USB cable connection is not needed.
- If connecting with a PC with the Bluetooth communication, communication setup must be performed with the DST-i configuration tool.
- When the Bluetooth communication with the PC is established, the PC communication (Bluetooth) indicator on this product lights or flashes in blue.
- When connecting the model with Bluetooth to a PC with the USB cable, the USB communication has the top priority in the communication between a PC.
- When communication way is changed from USB to Bluetooth while communicating, remove the USB cable with the HinoDX finished.

ACAUTION

- You must install the DST-i setup software on your PC before you connect the USB cable to your PC.

 Reference: Page 4 Installing DST-i setup software to a PC (all models) (Chapter 1 Before Use/Setup)
- When the PC does not supply adequate power, please contact your distributor.

1-5 Inserting an SD Memory Card

Inserting/removing an SD memory card


This product can use an SD memory card inserting it into the SD memory card slot. Using an SD memory card, the vehicle data can be stored in the SD memory card.

ACAUTION

- Depending on software, some functions with SD memory cards are not available.
 Refer to the instruction manual of the software to know whether your software supports the functions or not and the handling method.
- Use an SD memory card or an SDHC memory card.
- This product does not support an SDXC memory card.
- Use an SD memory card labeled with the SD logo mark and conforming to the SD standard.
 The following bland SD memory cards are recommended: Panasonic, SanDisk and Toshiba
- Not all the SD memory cards are supported on this product.

■ Inserting an SD memory card

- **1.** Turn the mode switch of this product OFF.
- **2.** Turn the notch of SD memory card to the right and insert gently to the slot end until a clicking noise is heard.

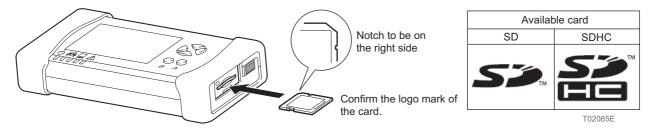

NOTE

• If the notch on the SD memory card side face is set to the "Lock" position, data storage and deletion are disabled by the write protect function (write inhibit). Make sure to unlock the write protect function before use.

■ Removing an SD memory card

- **1.** Turn the mode switch of this product OFF.
- 2. Push the SD memory card lightly.
- **3.** The SD memory card is ejected a little. Pull out it gently.

2 Basic Operations

2-1 Starting

1. Connect this product and the vehicle side diagnosis connector with the datalink cable.

Reference: Page 5 Connecting to the vehicle (Chapter 1 Before Use/Connection)

NOTE

Confirm that the vehicle ignition or key switch is LOCK.




T02762Z

2. Connect this product and a PC with the USB cable.

Reference: Page 6 Connecting to a PC (Chapter 1 Before Use/Connection)

NOTE

- If you use a model with LCD and do not use a PC, you do not need to connect with the USB cable.
- If you use a model with Bluetooth and connect with a PC through the Bluetooth communication function, you do not need to connect with the USB cable.
- **3.** Turn the mode switch of this product ON.

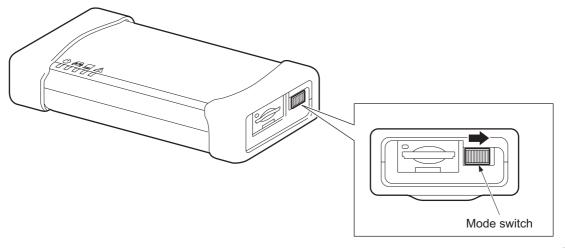

T01864E

NOTE

When turning the mode switch ON, the power indicator of this product turns green.

4. Turn the vehicle ignition or key switch ON.



T02763Z

NOTE

- When the vehicle ignition or key switch position is OFF or ACC, communication with the vehicle cannot be established. Turn the vehicle ignition or key switch ON or start the engine when using this product.
- This product starts even if the mode switch is OFF when the power is supplied to this product from DC jack in the state of connecting this product and the diagnosis connector of the vehicle side by the datalink cable.

2-2 Ending

1. Finish communications with the vehicle by HinoDX or DST-i software for HINO Vehicles.


ACAUTION

- Do not turn the mode switch of this product OFF or disconnect the datalink cable from this product during the active test. The diagnosed actuators could be stopped still in the drive status. Make sure to execute the ending procedure after finishing the active test.
- **2.** Turn the mode switch of this product OFF.
- **3.** Turn the vehicle ignition or key switch OFF.
- **4.** Disconnect the USB cable from this product and the PC.
- **5.** Disconnect the datalink cable from this product and the vehicle side diagnosis connector.

3 Indicator

3-1 Indicator

The indicators of this product provide the following information by their illumination.

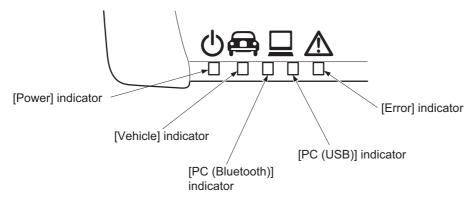

• [Power] indicator

Shows the status of power. Lights in green during power ON.

• [Vehicle] indicator

Shows the status of communications with the vehicle. Flashes in green during active communications.

• [PC (Bluetooth)] indicator

Shows the status of Bluetooth communications with the PC. Flashes in blue during active communications.

[PC (USB)] indicator


Shows the status of USB communications with the PC. Flashes in green during active communications.

• [Error] indicator

Lights or flashes in red when an error occurs.

• [SD Memory Card] indicator

Shows the access status of the SD memory card. Flashes in green during active access.

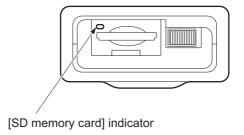

T01917E

T01900E



Product Specifications

4-1 Specifications of This Product

	Item		Specifications		
OS			μiTRON		
CPU			32-bit RISC microcomputer		
	Built-in Flash ROM		16 MB		
Memory	SDRAM		16 MB		
	EEPROM		32 KB		
	Size		2.7 inch TFT color LCD		
LCD *1	Resolution		QVGA (320 x 240 dots)		
	Display color		Max. 260000 colors		
Input device *1	Operation keys		6 keys		
	USB		USB 2.0 x 1		
	Bluetooth *2		Bluetooth 2.0		
	SD memory card		Slot x 1 (supporting SD and SDHC memory cards)		
	DC jack		JEITA4 standard type		
			Dedicated connector (D-sub 25 pin) x 1		
External interface *3		ISO9141	1ch		
LAternal interiace		CAN	2ch		
	Vehicle	J1850 (VPW)	1ch		
	communication	. ,	1ch		
		J1708	1ch		
		RS232C	1ch		
		Serial (5 V)	1ch		
Measurement	Simple voltage r	measurement *4	1ch (0 to 32 V, LSB=0.1 V)		
function *3	Trigger cable *4		1ch		
Built-in clock			RTC (Approx. 3 days backup)		
Main unit power	Vehicle power supply		DC 6.5 to 32 V (Datalink cable)		
supply voltage	USB power (BUS power)		DC 4.75 to 5.25 V *5		
Power consumption			Normally 1.5 W (12 VDC), Max. 2.5 W (12 VDC)		
Operating	Operating tempor		0 to 50°C [-10 to 60°C]		
environment	[Storage temperature]		,		
Dimensions	Operating humidity		35 to 85% (No condensation)		
Dimensions	Indicated the CLOD and Direction		135 mm (W) x 70 mm (H) x 35 mm (D)		
	Model without LCD and Bluetooth		Approx. 198 g		
Weight	Model without LCD and with Bluetooth		Approx. 201 g		
vveigni	Model with LCD and without Bluetooth		Approx. 225 g		
	Model with LCD and Bluetooth		Approx. 228 g		

^{*1} For models with LCD only

^{*2} For models with Bluetooth only

^{*3} Some functions require the support software.

^{*4} Parallel use of the simple voltage probe and the trigger cable is disabled.

^{*5} This product can be turned on by the power supplied from the USB power (BUS power). However, vehicle communication cannot be established when the power is not supplied from the vehicle.

5 Warranty

5-1 Warranty

- 1. The warranty period of this set is two years after the purchase day. However accessories are not covered, main body only.
- 2. Free repair warranty is applied only for the failure under proper operation conditions within the warranty period.
- 3. Non-free repair is applied to the following cases even if the valid warranty period remains.
 - Failure or damage from fire and natural disaster.
 - Failure or damage as a result of a falling during transportation and movement after purchase or from the improper handling.
 - Failure or damage caused from handling in a way contrary to proper operating methods and cautions described in this document.
 - Failure or damage from modification or liability for operations.
 - Replacement of external parts such as the resin case.
- 4. We shall have no liability for any direct or indirect damage resulting from failure or use of this product.
- 5. For request of repair, please contact your distributor.

Data preservation

Recorded data in this product could be lost in repair. Please note that we shall have no liability for any damage and data preservation derived in conjunction with data loss.

DENSO Overseas Subsidiary Company & TAS CORPORATION name/Address	Tel/Fax
DENSO AUTOMOTIVE SYSTEMS AUSTRALIA PTY. LTD.	Sales:
Address: 2-46 Merrindale Drive, Croydon, Victoria 3136, Australia	Tel: +61-3-8761-1400 Fax:+61-3-8761-1505 Service: Tel: +61-3-8761-1449 Fax:+61-3-8761-1505
DENSO INTERNATIONAL ASIA PTE. LTD.	Sales & Service:
Address: 51 Science Park Road, #01-19 The Aries, Science Park II, Singapore 117586	Tel: +65-6776-8268 Fax:+65-6776-8698
PT. DENSO SALES INDONESIA	Sales & Service:
Address: JL.Gaya Motor I, Sunter II, Kel Sungai Bambu, Tanjung Priok, Jakarta Utara, Jakarta-Indonesia	Tel: +62-21-651-2279 Fax:+62-21-651-2284
DENSO (MALAYSIA) SDN. BHD.	Sales & Service:
Address: Lot 2, Jalan P/1, Section 13, 43650 Bandar Baru Bangi, Selangor Darul Ehsan, Malaysia	Tel: +60-3-5569-9933 Fax:+60-3-5567-3301
PHILIPPINE AUTO COMPONENTS, INC.	Sales & Service:
Address: 109 Unity Avenue, Carmelray Industrial Park 1, 4037 Canlubang, Calamba City, Laguna, Philippines	Tel: +63-49-549-3030 Fax:+63-49-549-3088
DENSO TAIWAN CORP.	Sales & Service:
Address: 525, Sec. 2 Mei Su Road Yang Mei Town Taoyuan Hsien, Taiwan, R.O.C.	Tel: +886-3-482-8001 Fax:+886-3-482-8003
DENSO SALES (THAILAND) CO.,LTD.	Sales:
Address: 888 Moo 1, Bangna-Trad Rd. Km. 27.5, Tambol Bangbo,	Tel: +66-2-315-9550
Amphur Bangbo, Samutprakarn 10560 Thailand	Fax:+66-2-315-9556 Service: Tel: +66-2-315-9550 Fax:+66-2-315-9557
DENSO EUROPE B.V.	Sales & Service:
Address: Hogeweyselaan 165, 1382 JL Weesp, The Netherlands	Tel: +31-294-493-493 Fax:+31-294-417-122
DENSO SALES MIDDLE EAST & NORTH AFRICA FZE.	Service:
Address: P.O.Box 261986, Jebel Ali Free Zone South, Dubai, United Arab Emirates	Tel: +971-04-880-7789 Fax:+971-04-880-7790
DENSO (CHINA) INVESTMENT CO.,LTD.	Sales:
Address: Room No.518, The Beijing Fortune Building, No.5 Dong San Huan Bei Lu, Chaoyang District, Beijing, 100004, China	Tel: +86-10-6590-8025 Fax:+86-10-6590-8065 Service: Tel: +86-10-6590-8021 Fax:+86-10-6590-9044
DENSO INTERNATIONAL INDIA PVT. LTD.	Sales & Service:
Address: Plot No.3, Sector-3, IMT Manesar, Gurgaon, Haryana-122 050, India	Tel: +91-11-2617-6693 Fax:+91-11-2618-2474
DENSO PRODUCTS AND SERVICES AMERICAS, INC. Address: 3900 Via Oro Avenue, Long Beach, California 90810, U.S.A.	Sales: Tel: +310-834-8652 Fax:+310-952-7406 Service: Tel: +310-834-8652 Fax:+310-952-7599
DENSO SALES CANADA, INC.	Sales & Service:
Address: 195 Brunel Road, Mississauga, Ontario, Canada, L4Z 1X3	Tel: +1-905-890-0890 Fax:+1-905-890-8474
DENSO SALES KOREA CORPORATION	Sales:
Address: 131, Seonggogae-ro, Uiwang-si, Gyeonggi-do, Korea ∓437-120	Tel: +82-31-340-1786 Fax:+82-31-8033-7211
TAS CORPORATION Address: 248-2 Shimoshiota Narumi-cho, Midori-ku, Nagoya, Aichi, 458-0801, JAPAN	Sales & Service: Tel: +81-52-621-3277 Fax:+81-52-621-3288

Regulatory Information to user

MODEL: DN-VIM-002

1. 日本電波法

<Bluetooth 付きモデル>

Bluetooth モジュールは、電波法の認証に適合しています。必ず以下のことをお守りください。 製品に貼り付けてあるシールをはがさないでください。 不用意に分解しないでください。分解、改造したものを使用することは法律で禁止されています。

2. EMC and Radio Regulation in U.S.A.

<Model with Bluetooth, Model without Bluetooth>

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This device has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of

These limits are designed to provide reasonable protection against harmful interference when the device is operated in a commercial environment.

This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

<Model with Bluetooth>

CAUTION: Radio Frequency Radiation Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This device has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

3. EMC and Radio Regulation in CANADA

<Model with Bluetooth>

NOTE

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device. This device complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the

IC radio frequency (RF) Exposure rules.

This device has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

L'opération est soumise aux deux conditions suivantes:

- (1) Ce périphérique ne peut être la cause d'interférence, et
- (2) Ce périphérique se doit d'accepter toute(s) interférence(s), y compris celle(s) susceptible(s) de provoquer des opérations indésirables dans le cadre de son fonctionnement.

Cet équipement est en conformité avec les limites d'exposition aux rayonnements IC précédemment énoncées dans un environnement non contrôlé et répond aux règles d'exposition aux radiofréquences (RF) IC définies par RSS-102. Parce qu'il bénéficie de très faibles niveaux d'énergie RF, cet équipement a été jugé conforme sans qu'il soit nécessaire de procéder à une évaluation de l'exposition permissive maximale (MPE).

Toutefois, il est recommandé que cet équipement soit installé et opéré en prenant soin que le radiateur soit à une distance minimum de 20 cm de toute personne se trouvant dans sa périphérie (à l'exclusion des extrémités corporelles suivantes: mains et poignets et, pieds et chevilles).

Co-implantation: Cet émetteur ne doit pas être co-implanté ou exploité conjointement avec une autre antenne ou émetteur.

4. EMC and Radio Directive in EU, EFTA and other countries applying CE marking

<Model without Bluetooth>

2004/108/EC

Harmonized Standards applied :EN 55011 (This product falls under group 1 and class A)

:EN 61000-6-2



Manufacturer

Name : DENSO CORPORATION

Address :1-1 Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Importer

Name : DENSO EUROPE B.V.

Address : Hogeweyselaan 165, 1382 JL Weesp, the Netherlands

 Section
 : Sales & Service

 Tel
 :+31-294-493-493

 Fax
 :+31-294-417-122

Regulatory Information to user

MODEL: DN-VIM-003

1. 日本電波法

<Bluetooth 付きモデル>

Bluetooth モジュールは、電波法の認証に適合しています。必ず以下のことをお守りください。 製品に貼り付けてあるシールをはがさないでください。 不用意に分解しないでください。分解、改造したものを使用することは法律で禁止されています。

2. EMC and Radio Regulation in U.S.A.

<Model with Bluetooth, Model without Bluetooth>

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This device has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the device is operated in a commercial environment.

This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

<Model with Bluetooth>

CAUTION: Radio Frequency Radiation Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This device has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

3. EMC in KOREA

<Model without Bluetooth>



상호명 :DENSO CORPORATION
기기 명칭(모델명) :Diagnostic Tester (DN-VIM-003)
제조자/제조국가 :DENSO CORPORATION/일본 등록번호 :KCC-REM-DKR-DN-VIM-003
제조년월 :Refer to serial number on product.

For more information please contact the office that is listed in the instruction manual.

- 이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는
- 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

4. EMC and Radio Regulation in CANADA

<Model with Bluetooth>

NOTE

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

This device has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

L'opération est soumise aux deux conditions suivantes:

- (1) Ce périphérique ne peut être la cause d'interférence, et
- (2) Ce périphérique se doit d'accepter toute(s) interférence(s), y compris celle(s) susceptible(s) de provoquer des opérations indésirables dans le cadre de son fonctionnement.

Cet équipement est en conformité avec les limites d'exposition aux rayonnements IC précédemment énoncées dans un environnement non contrôlé et répond aux règles d'exposition aux radiofréquences (RF) IC définies par RSS-102. Parce qu'il bénéficie de très faibles niveaux d'énergie RF, cet équipement a été jugé conforme sans qu'il soit nécessaire de procéder à une évaluation de l'exposition permissive maximale (MPE).

Toutefois, il est recommandé que cet équipement soit installé et opéré en prenant soin que le radiateur soit à une distance minimum de 20 cm de toute personne se trouvant dans sa périphérie (à l'exclusion des extrémités corporelles suivantes: mains et poignets et, pieds et chevilles).

Co-implantation: Cet émetteur ne doit pas être co-implanté ou exploité conjointement avec une autre antenne ou émetteur.

5. EMC and Radio Directive in EU, EFTA and other countries applying CE marking

<Model with Bluetooth, Model without Bluetooth>

2004/108/EC

Harmonized Standards applied : EN 55011 (This product falls under group 1 and class A)

:EN 61000-6-2

<Model with Bluetooth>

1999/5/EC

Hereby, DENSO CORPORATION, declares that this DN-VIM-003 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

This device (DN-VIM-003) is including the 2.4GHz wireless transceiver (Bluetooth) that communicate with Personal Computer.



Manufacturer
Name: DENSO CORPORATION

Address :1-1 Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

Importer

Name : DENSO EUROPE B.V.

Address : Hogeweyselaan 165, 1382 JL Weesp, the Netherlands

Section : Sales & Service

Tel :+31-294-493-493

Fax :+31-294-417-122

产品中有毒有害物质或元素的名称及含量

	有毒有害物质或元素					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr ⁶⁺)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子元器件	×	0	0	0	0	0
焊锡	0	0	0	0	0	0
电缆	0	0	0	0	×	×

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

环境保护使用期限要以满足以下的条件为前提。

保存温度	- 10℃~60℃
使用温度	0℃~50℃

^{×:}表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。



1st Ed. October, 2010 7th Ed. October, 2014